

LED Trim (4" and 6") INSTALLATION INSTRUCTIONS

CAUTION:

1. Read all instructions before starting installation.
2. This product must be installed in accordance with the applicable installation codes by a qualified electrician familiar with the construction and operation of the product and the hazards involved.
3. Disconnect power at circuit breaker or fuse before starting installation.
4. To avoid injury, wear gloves during installation.
5. Use minimum 75°C supply wires.

Instructions:

1. Cut 4" or 6" hole in ceiling depending upon trim size. Use template on the reverse side of this instruction to ensure fit.
2. Remove top of junction box of luminaire by removing thumbscrew and squeezing clip. (see Fig 1)

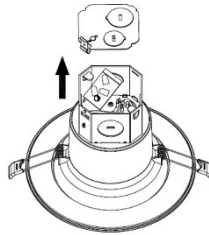


Fig 1

3. Run flexible conduit (provided by others) through hole in ceiling. (see Fig 2)

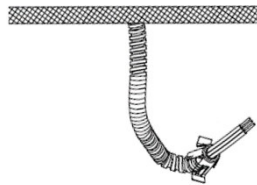


Fig 2

4. Remove appropriate knockout from side of luminaire junction box and connect flexible conduit using appropriate connectors (provided by others). (see Fig 3)

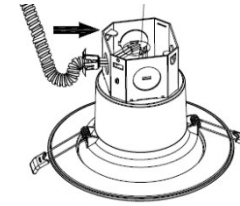


Fig 3

5. Make wiring connections. (see Wiring Diagram)
6. Snap top of luminaire junction box in place and secure with thumbscrew.
7. Squeeze luminaire clips upward and slide luminaire up through opening in ceiling and release clips. The clips will spring back and secure the luminaire to the ceiling. (see Fig 4)



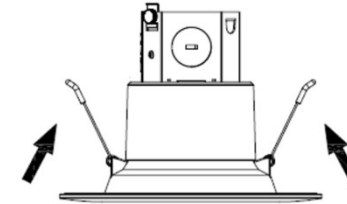


Fig 4

Wiring Diagram

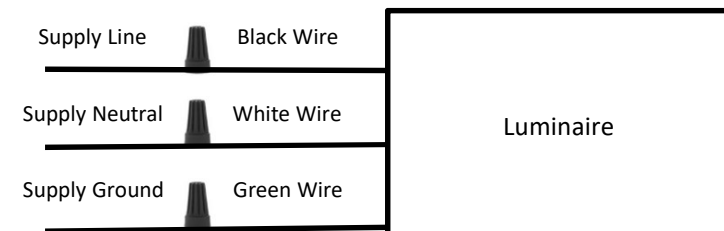

SAVE THESE INSTRUCTIONS

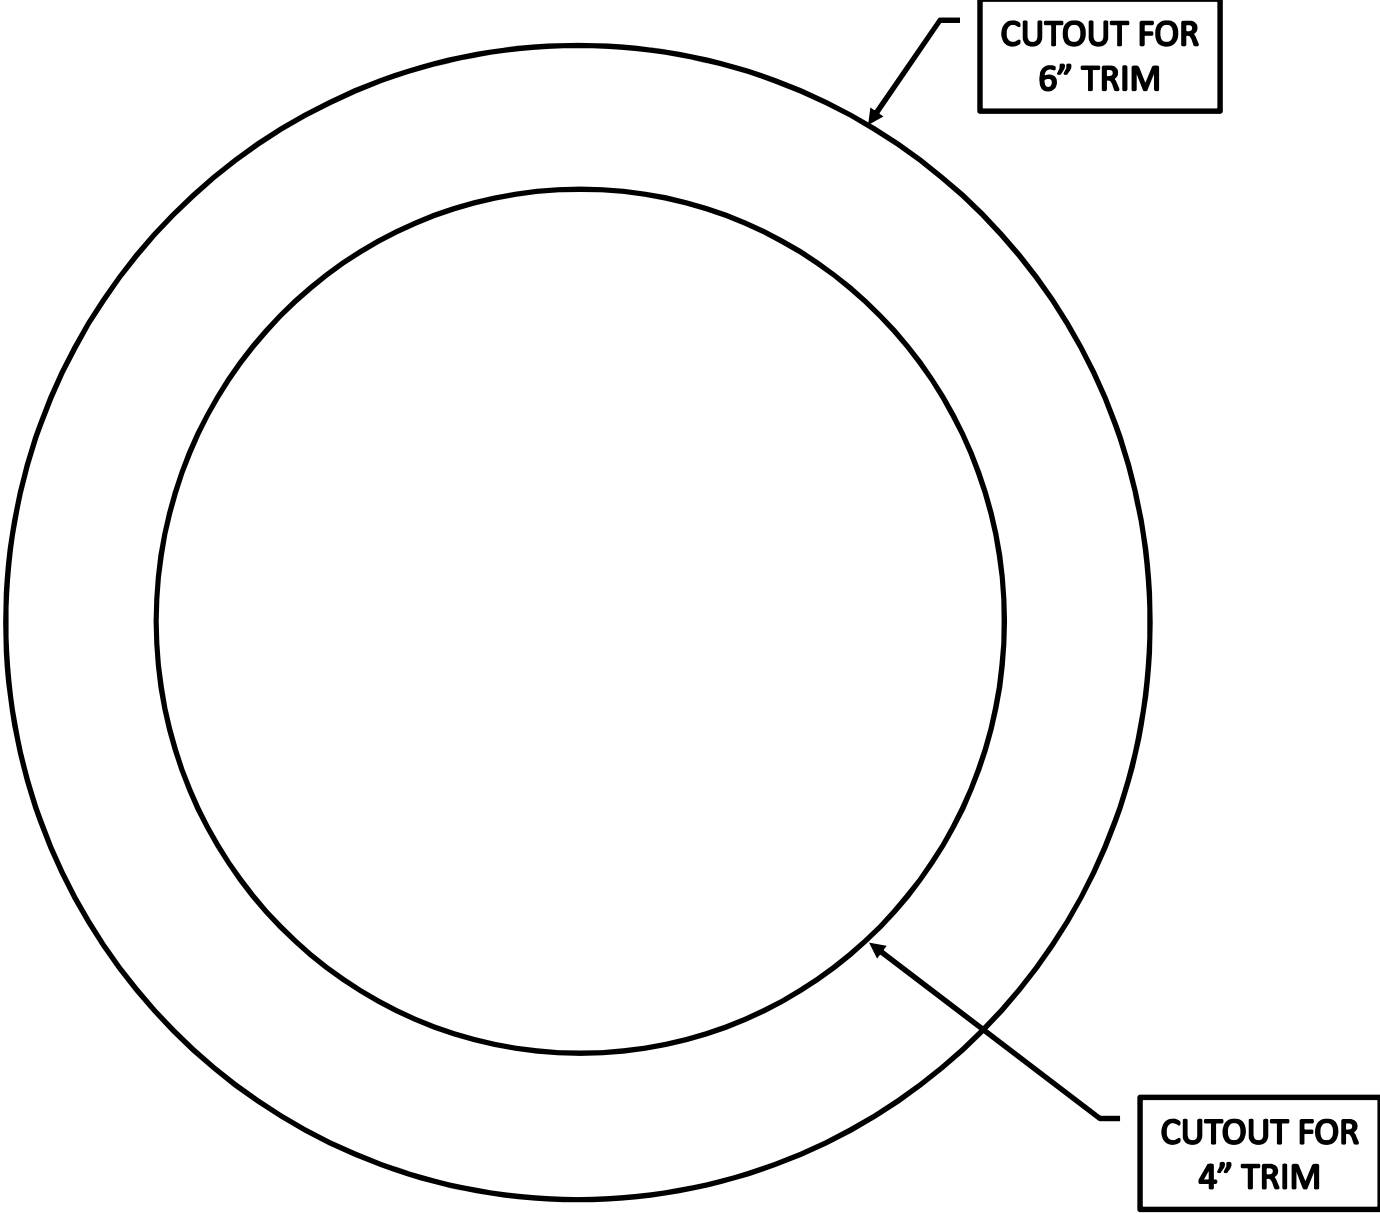

CUTOUT FOR
6" TRIM

CUTOUT FOR
4" TRIM