

## Maestro sensor switch

The Lutron Maestro occupancy sensor switch combines a Maestro switch with a passive infrared occupancy or vacancy sensor. The sensor detects the heat from occupants moving within an area to determine whether the space is occupied. Based on the feedback from the sensor, the occupancy sensor switch will adjust the load accordingly.


### Features

- Passive infrared sensors with exclusive Lutron XCT Technology for fine motion detection
- 180° sensor field-of-view
- Up to 30 ft x 30 ft (9 m x 9 m) [900 ft<sup>2</sup> (81 m<sup>2</sup>)] major motion coverage and 20 ft x 20 ft (6 m x 6 m) [400 ft<sup>2</sup> (36 m<sup>2</sup>)] minor motion coverage
- Occupancy version can be set to Auto-ON/Auto-OFF or Manual-ON/Auto-OFF
- Vacancy version available to meet CA Title 24 requirements
- Adjustable timeout (1, 5, 15, or 30 minutes) and high/low sensitivity adjustment
- Load types: incandescent, halogen, ELV, MLV, CFL, LED, magnetic fluorescent, electronic fluorescent, and fan.

**Note:** "XX" in model number represents color/finish code.

### Models available

MS-OPS2-XX<sup>1</sup>  
 MS-OPS2H-XX-C<sup>2</sup>  
 MS-OPS5M-XX<sup>3</sup>  
 MS-OPS5MH-XX-C<sup>2</sup>  
 MS-OPS6M2-DV-XX  
 UMS-OPS6M2-DV-XX<sup>4</sup>  
 MS-VPS2-XX<sup>1</sup>  
 MS-VPS5M-XX<sup>3</sup>  
 MS-VPS6M2-DV-XX  
 UMS-VPS6M2-DV-XX<sup>4</sup>

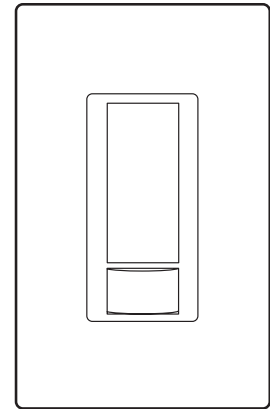

MS-OPS2  
 MS-OPS2H-XX-C  
 MS-OPS5M  
 MS-OPS5MH-XX-C  
 MS-OPS6M2-DV  
 UMS-OPS6M2-DV

MS-VPS2  
 MS-VPS5M  
 MS-VPS6M2-DV  
 UMS-VPS6M2-DV

<sup>1</sup> For clamshell packaging, add an "H" after the "2". Available in AL, IV, LA, and WH.

<sup>2</sup> Clamshell packaged product for Canada. Available in AL, IV, LA, and WH.

<sup>3</sup> For clamshell packaging, add an "H" after the "M". Available in AL, IV, LA, and WH.

<sup>4</sup> BAA-compliant model. For other BAA/TAA compliant products, please visit our website at [www.lutron.com/BAA](http://www.lutron.com/BAA) and select "download BAA product list".

|                                          |                                               |                      |
|------------------------------------------|-----------------------------------------------|----------------------|
| <b>Job Name:</b><br><input type="text"/> | <b>Model Numbers:</b><br><input type="text"/> |                      |
| <b>Job Number:</b> <input type="text"/>  | <input type="text"/>                          | <input type="text"/> |

## Specifications

### Regulatory Approvals

- UL® Listed to U.S. and Canadian safety requirements.
- NOM Certification (MS- models only).

### Power

- 120 V~ 50/60 Hz\*
- 120–277 V~ 50/60 Hz\*

### Key Design Features

- All lighting loads
- Crush/tamper resistant lens
- Smart ambient light detection
- Adaptive switching algorithm for extended relay life
- XCT Technology for fine motion detection
- Lutron patented Softswitch

### Environment

- Ambient operating temperature: 32 °F to 104 °F (0 °C to 40 °C), 0%–90% humidity, non-condensing. Indoor use only.

### Warranty

- 5-Year Limited Warranty. For additional Warranty information, please visit [www.lutron.com/TechnicalDocumentLibrary/Sensor\\_Warranty.pdf](http://www.lutron.com/TechnicalDocumentLibrary/Sensor_Warranty.pdf)

### Additional Information

- When using MS-OPS2, MS-OPS5M, MS-OPS6M2-DV, MS-VPS2, MS-VPS5M, or MS-VPS6M2-DV on GFI-controlled circuits, please see Lutron P/N 048440 on [www.lutron.com](http://www.lutron.com)
- For Maestro Occupancy sensing dimmer models, please see Lutron P/N 369270 on [www.lutron.com](http://www.lutron.com)
- For use with MA-AS, MSC-AS, MA-AS-277, or MSC-AS-277 to control the load from more than two locations, please see Lutron P/N 048435 on [www.lutron.com](http://www.lutron.com)
- For more information, please see [www.lutron.com/occvacensors](http://www.lutron.com/occvacensors)
- Lutron Customer Assistance: 1.844.LUTRON1

## Advanced Features

### Switching

- Standard zero cross—maximizes relay life by switching at the point of minimum energy on the AC power curve
- Adaptive zero cross—maximizes relay life by switching at the point of minimum energy on the AC power curve. Actively adapts to variations in relay timing
- Lutron Patented Softswitch circuit—eliminates arcing at mechanical contacts when loads are switched. Extends relay life to an average of 1,000,000 cycles (on/off) for resistive, capacitive, or inductive sources

### XCT Technology

Advanced sensing technology for fine motion detection ensures that the lights stay on while the room is occupied, and that the sensor does not turn on falsely when there is no occupancy in the room. For more information, see [www.lutron.com/TechnicalDocumentLibrary/white%20paper%20XCT%204-23-09%20B.pdf](http://www.lutron.com/TechnicalDocumentLibrary/white%20paper%20XCT%204-23-09%20B.pdf)

\* Maximum current ratings for individual models are provided in the **Selection Matrix** on page 4.

|                      |                      |                      |
|----------------------|----------------------|----------------------|
| Job Name:            | Model Numbers:       |                      |
| <input type="text"/> | <input type="text"/> | <input type="text"/> |
| Job Number:          | <input type="text"/> | <input type="text"/> |

## Custom Settings

### Ambient Light Detection

Lights turn on only if natural light in room is low.

- Smart—Ambient light threshold adjusts precisely to the user's preference.

Instructions: If switch turns on when there is enough natural light, or if switch does not turn on when there is not enough natural light, press the large button within 5 seconds of entering the room. Over time, this interaction will "teach" the switch your preferred setting.

### Sensor Operation

- Occupancy/Vacancy: Auto-ON / Auto-OFF or Manual-ON / Auto-OFF
- Vacancy only: Manual-ON / Auto-OFF only

### Timeout Options

(See **Additional Features** on page 5 for default settings)

- 1 Minute
- 5 Minutes
- 15 Minutes
- 30 Minutes

### Sensitivity Options

- High sensitivity (default)
- Low sensitivity

### Auto-ON Options

(MS-OPS and UMS-OPS only)

- Occupancy (default): Auto-ON / Auto-OFF
- Vacancy\*: Manual-ON / Auto-OFF
- Low Light: Lights turn on only if needed (if ambient light is below threshold)

\* There is a 15-second grace period that begins when the lights are automatically turned off, during which the lights will automatically turn back on in response to motion. This grace period is provided as a safety and convenience feature in the event that the lights turn off while the room is still occupied, so that the user does not need to manually turn the lights back on. After 15 seconds, the grace period expires and the lights must be manually turned on.

### Manual Off-While-Occupied Options

(MS-OPS and UMS-OPS only — see **Additional Features** on page 5 for default setting)

- Enabled
  - When the occupancy sensor switch is manually turned off, the occupancy sensor switch will not turn the lights back on automatically while the room is occupied.
  - Once the room is vacated, the Auto-ON feature returns to normal operation after the timeout period has expired.
  - This may be the preference in conference rooms or classrooms while viewing presentations. This feature requires motion to keep the lights off.
- Disabled
  - When the occupancy sensor switch is manually turned off, the Auto-ON feature will return to normal operation after 25 seconds.
  - This may be the preference if the user always wants the lights to turn on upon entering and the lights to turn off when the room is vacant.

|                      |                      |                      |
|----------------------|----------------------|----------------------|
| Job Name:            | Model Numbers:       |                      |
| <input type="text"/> | <input type="text"/> | <input type="text"/> |
| Job Number:          | <input type="text"/> | <input type="text"/> |

## Selection Matrix

| Vacancy only <sup>2</sup> (Title 24 compliant)           |  |  |  |  |  |  |  |  |  |  |
|----------------------------------------------------------|--|--|--|--|--|--|--|--|--|--|
| Single-pole only                                         |  |  |  |  |  |  |  |  |  |  |
| Works with standard mechanical 3-way switch <sup>3</sup> |  |  |  |  |  |  |  |  |  |  |
| Works with companion switch <sup>3, 4</sup>              |  |  |  |  |  |  |  |  |  |  |
| All lighting loads (120 V~ only)                         |  |  |  |  |  |  |  |  |  |  |
| All lighting loads (120–277 V~ only)                     |  |  |  |  |  |  |  |  |  |  |
| Fan (120 V~)                                             |  |  |  |  |  |  |  |  |  |  |
| Light + Fan (120 V~)                                     |  |  |  |  |  |  |  |  |  |  |
| Neutral wire optional*                                   |  |  |  |  |  |  |  |  |  |  |
| Minimum load required                                    |  |  |  |  |  |  |  |  |  |  |
| Relevant wiring diagram                                  |  |  |  |  |  |  |  |  |  |  |

Model Number<sup>1</sup>

|                               |   |   |   |   |     |     |     |     |   |  |         |
|-------------------------------|---|---|---|---|-----|-----|-----|-----|---|--|---------|
| MS-OPS2-XX                    |   | ✓ |   |   | 2 A |     |     |     | ✓ |  | 1       |
| MS-OPS2H-XX-C                 |   | ✓ |   |   | 2 A |     |     |     | ✓ |  | 1       |
| MS-OPS5M-XX                   |   |   | ✓ | ✓ | 5 A |     | 3 A | 3 A | ✓ |  | 2, 3, 5 |
| MS-OPS5MH-XX-C                |   |   | ✓ | ✓ | 5 A |     | 3 A | 3 A | ✓ |  | 2, 3, 5 |
| MS-OPS6M2-DV-XX               |   |   | ✓ | ✓ |     | 6 A | 3 A | 3 A | ✓ |  | 2–6     |
| UMS-OPS6M2-DV-XX <sup>5</sup> |   |   | ✓ | ✓ |     | 6 A | 3 A | 3 A | ✓ |  | 2–6     |
| MS-VPS2-XX                    | ✓ | ✓ |   |   | 2 A |     |     |     | ✓ |  | 1       |
| MS-VPS5M-XX                   | ✓ |   | ✓ | ✓ | 5 A |     | 3 A | 3 A | ✓ |  | 2, 3, 5 |
| MS-VPS6M2-DV-XX               | ✓ |   | ✓ | ✓ |     | 6 A | 3 A | 3 A | ✓ |  | 2–6     |
| UMS-VPS6M2-DV-XX <sup>5</sup> | ✓ |   | ✓ | ✓ |     | 6 A | 3 A | 3 A | ✓ |  | 2–6     |

<sup>1</sup> XX in model number represents color/finish code.

<sup>2</sup> Occupancy sensors can be configured as Auto-ON/Auto-OFF or Manual-ON/Auto-OFF. Vacancy sensors are configured as Manual-ON/Auto-OFF only.

<sup>3</sup> Standard mechanical 3-way switch cannot be combined with companion switch.

<sup>4</sup> Companion switch MA-AS, MSC-AS, MA-AS-277, or MSC-AS-277 is required for multi-location installations (more than two locations controlling the same lighting circuit). Up to nine companion switches may be connected.

<sup>5</sup> BAA-compliant model. For other BAA/TAA compliant products, please visit our website at [www.lutron.com/BAA](http://www.lutron.com/BAA) and select "download BAA product list".

\* **Note:** Neutral is optional only for retrofit or replacement applications when ground connection is available. Connect green-sleeve wire to ground when a neutral connection is not available. When a neutral connection is available, remove the green sleeve and connect the white wire to neutral. Please note that a ground or neutral wire is required for product to function. If neither wire is present, consult a licensed electrician.

|                      |                      |                      |
|----------------------|----------------------|----------------------|
| Job Name:            | Model Numbers:       |                      |
| <input type="text"/> | <input type="text"/> | <input type="text"/> |
| Job Number:          | <input type="text"/> | <input type="text"/> |

## Additional Features

| Crush/tamper-resistant lens               |   |       |          |   |          |    |
|-------------------------------------------|---|-------|----------|---|----------|----|
| Ambient light detection                   |   |       |          |   |          |    |
| Switching                                 |   |       |          |   |          |    |
| XCT technology                            |   |       |          |   |          |    |
| Manual off-while-occupied default setting |   |       |          |   |          |    |
| Default timeout (minutes)                 |   |       |          |   |          |    |
| Model Number <sup>1</sup>                 |   |       |          |   |          |    |
| MS-OPS2-XX                                | ✓ | Smart | Adaptive | ✓ | Disabled | 5  |
| MS-OPS2H-XX-C                             | ✓ | Smart | Adaptive | ✓ | Disabled | 5  |
| MS-OPS5M-XX                               | ✓ | Smart | Adaptive | ✓ | Disabled | 5  |
| MS-OPS5MH-XX-C                            | ✓ | Smart | Adaptive | ✓ | Disabled | 5  |
| MS-OPS6M2-DV-XX                           | ✓ | Smart | Adaptive | ✓ | Enabled  | 15 |
| UMS-OPS6M2-DV-XX                          | ✓ | Smart | Adaptive | ✓ | Enabled  | 15 |
| MS-VPS2-XX                                | ✓ | Smart | Adaptive | ✓ |          | 5  |
| MS-VPS5M-XX                               | ✓ | Smart | Adaptive | ✓ |          | 5  |
| MS-VPS6M2-DV-XX                           | ✓ | Smart | Adaptive | ✓ |          | 15 |
| UMS-VPS6M2-DV-XX                          | ✓ | Smart | Adaptive | ✓ |          | 15 |

<sup>1</sup> XX in model number represents color/finish code.

|                      |                      |                      |
|----------------------|----------------------|----------------------|
| Job Name:            | Model Numbers:       |                      |
| <input type="text"/> | <input type="text"/> | <input type="text"/> |
| Job Number:          | <input type="text"/> | <input type="text"/> |

## Placement and Operation

- The ability of the occupancy sensor switch to detect motion requires line-of-sight of room occupants. The occupancy sensor switch must have an unobstructed view of the room.
- Hot objects and moving air currents can affect the performance of the occupancy sensor switch.
- The performance of the occupancy sensor switch depends on a temperature differential between the ambient room temperature and that of room occupants. Warmer rooms may reduce the ability of the occupancy sensor switch to detect occupants.

### Definitions


**Major motion:** movement of a person entering or passing through an area.

**Minor motion:** movement of a person occupying an area and engaging in small activities (e.g., reaching for a telephone, turning the pages of a book, opening a file folder, picking up a coffee cup).


### NEMA WD7 Coverage

 Major motion coverage: 900 ft<sup>2</sup> (81 m<sup>2</sup>)


 Minor motion coverage: 400 ft<sup>2</sup> (36 m<sup>2</sup>)

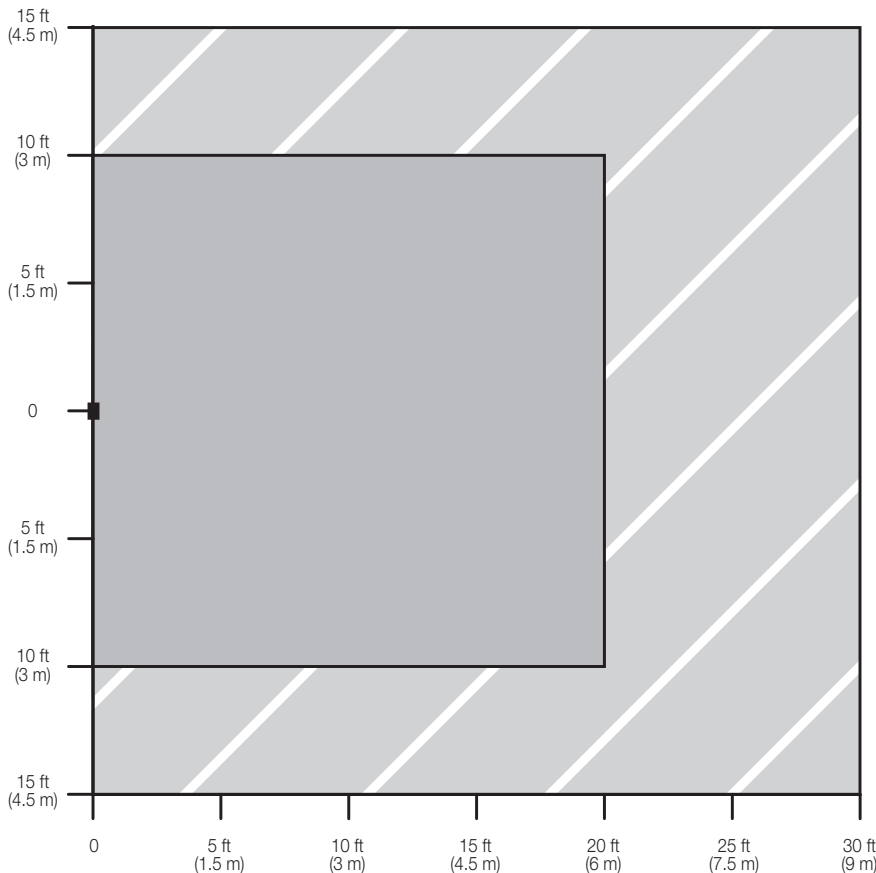

### Horizontal Beam Diagram

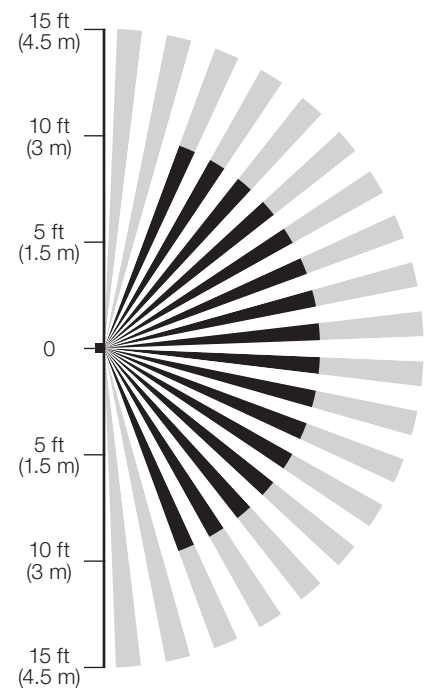

### Vertical Beam Diagram

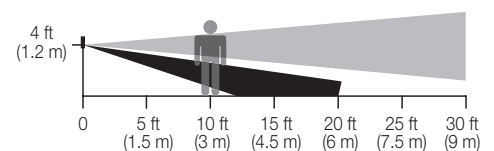

Job Name:

Model Numbers:




Job Number:


## Dimensions

Measurements shown as: in (mm).

Front View

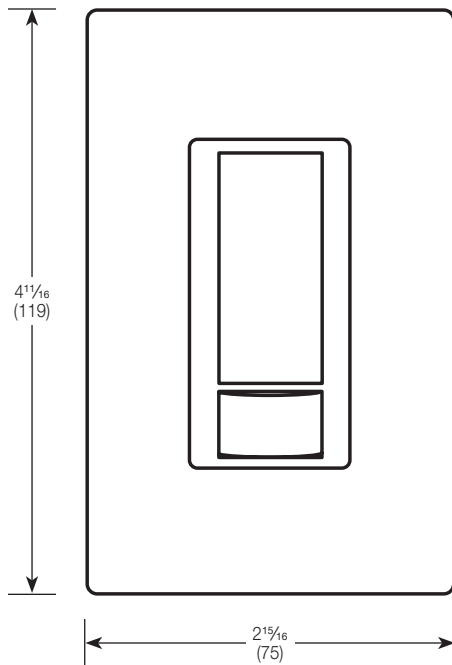


Side View

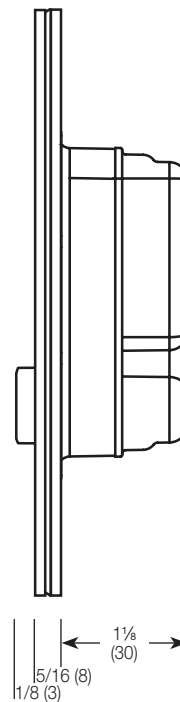


## Ganging

When ganging with other controls in the same wallbox, remove inside fins (UMS-OPS6M-DV and UMS-VPS6M-DV only).

Each control has  
inside fins removed

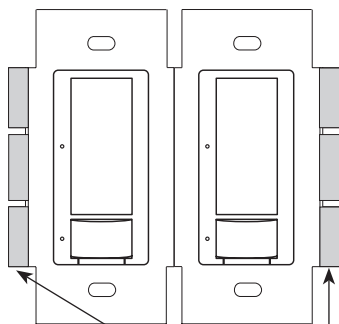

Middle of Gang control has  
all fins removed

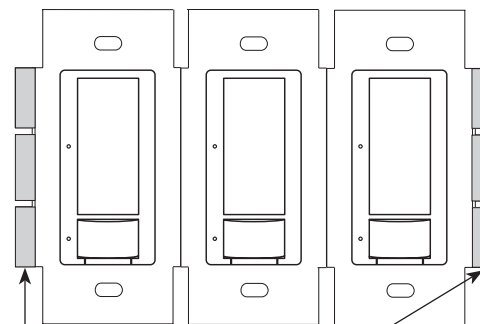


Do NOT remove outside fins on end-of-gang controls

Job Name:


Model Numbers:

Job Number:

## Mounting

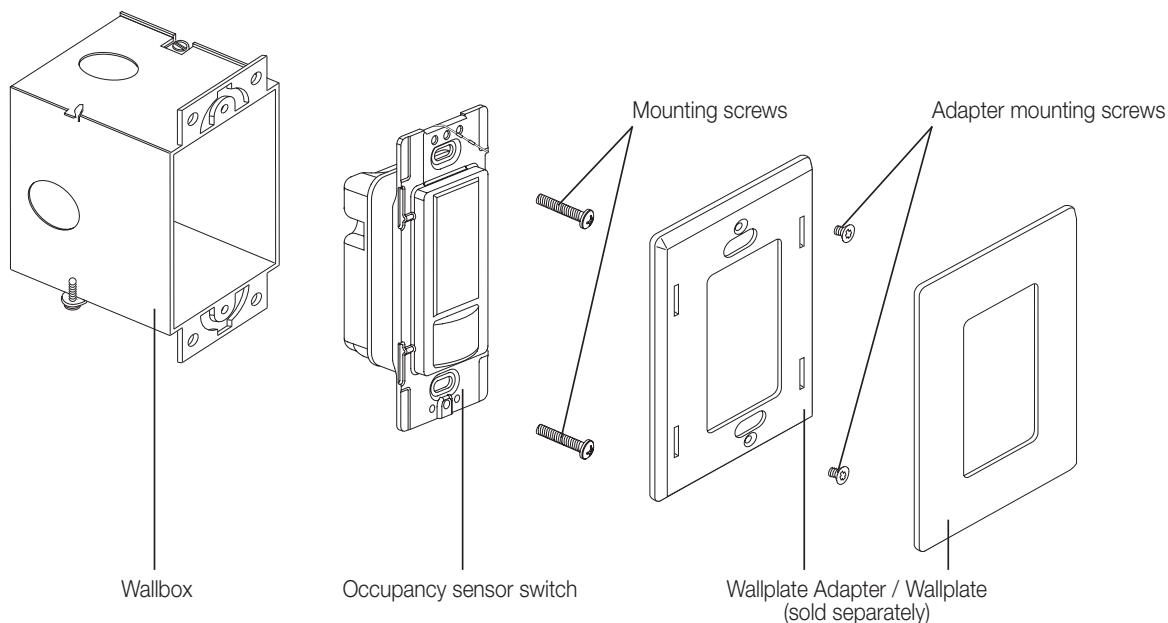

## Operation

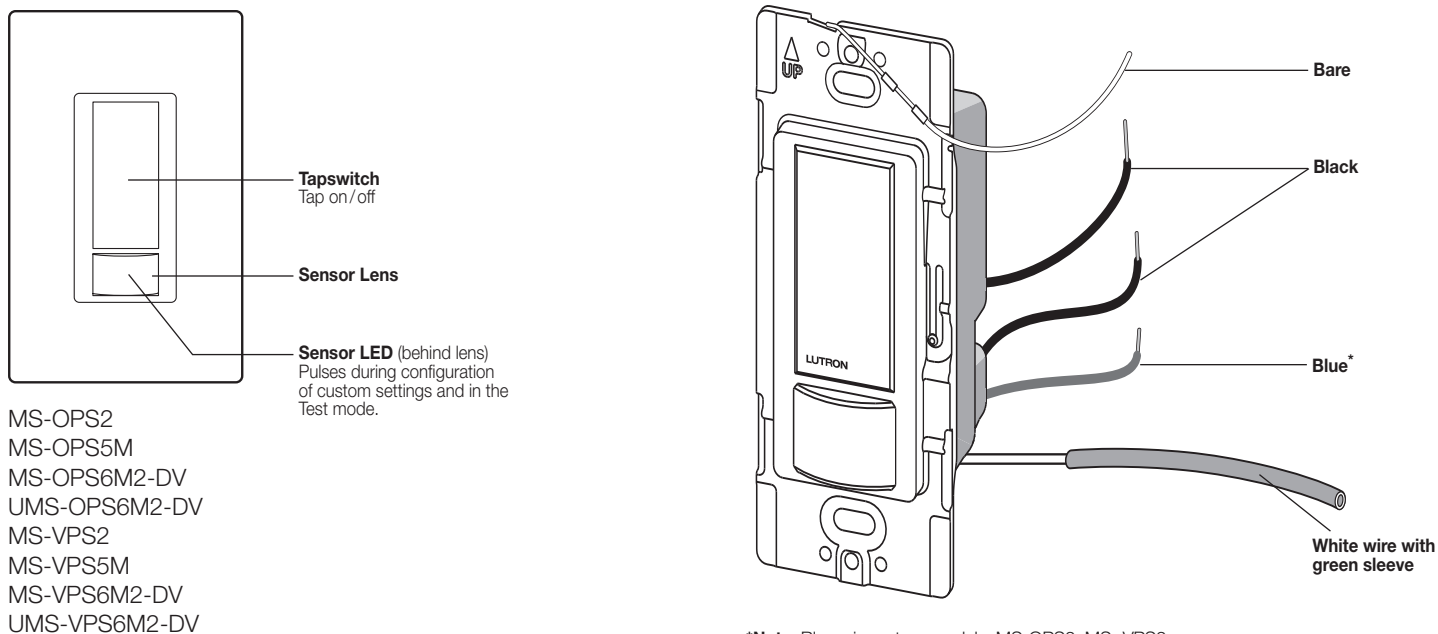

|                                          |                                               |                      |
|------------------------------------------|-----------------------------------------------|----------------------|
| <b>Job Name:</b><br><input type="text"/> | <b>Model Numbers:</b><br><input type="text"/> |                      |
| <b>Job Number:</b> <input type="text"/>  | <input type="text"/>                          | <input type="text"/> |




## Wiring Diagrams

### Wiring Diagram 1- with Neutral

#### Single Location Installation (120 V~)

-OPS2 and -VPS2

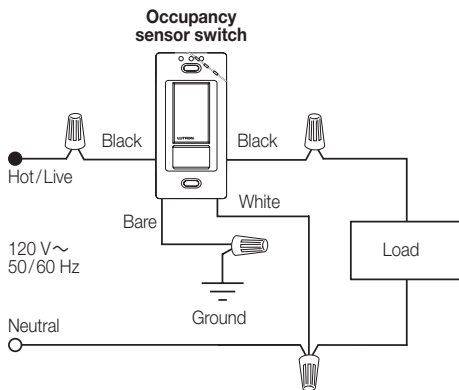


**Note:** When a neutral connection is available, remove the green sleeve and connect the white wire to neutral.

### Wiring Diagram 1- without Neutral

#### Single Location Installation (120 V~)

-OPS2 and -VPS2

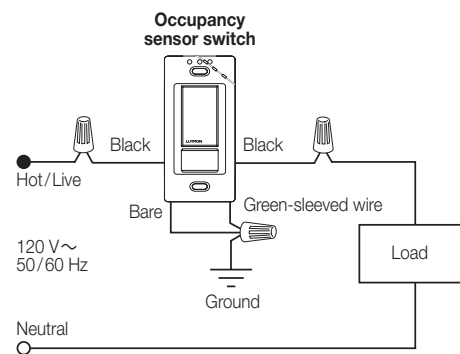


**Note:** Connect green-sleeved wire to ground only in retrofit and replacement applications.

### Wiring Diagram 2 - with Neutral

#### Single Location Installation (120 V~)<sup>1</sup>

-OPS5M, -OPS6M2-DV, -VPS5M, -VPS6M2-DV

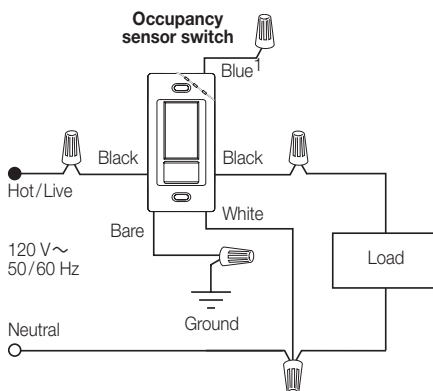


**Note:** When a neutral connection is available, remove the green sleeve and connect the white wire to neutral.

### Wiring Diagram 2 - without Neutral

#### Single Location Installation (120 V~)<sup>1</sup>

-OPS5M, -OPS6M2-DV, -VPS5M, -VPS6M2-DV

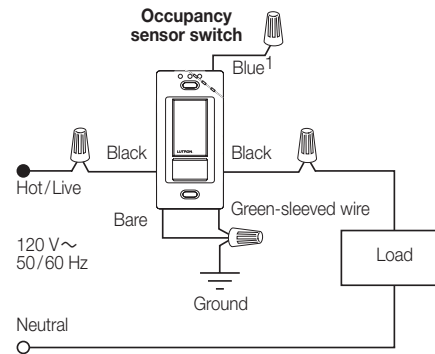

**Note:** Connect green-sleeved wire to ground only in retrofit and replacement applications.

- <sup>1</sup> When using controls in single location installations, tighten the blue terminal or cap blue wire. Do not connect the blue terminal/wire to any other wire or to ground.
- <sup>2</sup> Only one occupancy sensor switch can be used per multi-location circuit.
- <sup>3</sup> A single standard mechanical 3-way switch or up to 9 companion switches may be connected to most occupancy sensor switches. Standard mechanical 3-way switch cannot be combined with companion switch. Total blue terminal wire length may be up to 150 ft (46 m).

*Continued on next page...*


|             |                |  |
|-------------|----------------|--|
| Job Name:   | Model Numbers: |  |
|             |                |  |
| Job Number: |                |  |

Wiring Diagrams *(continued)*


## Wiring Diagram 3 - with Neutral

3-way Installation with Standard Mechanical Switch (120 V~)<sup>2, 3</sup>

-OPS5M, -OPS6M2-DV, -VPS5M, -VPS6M2-DV

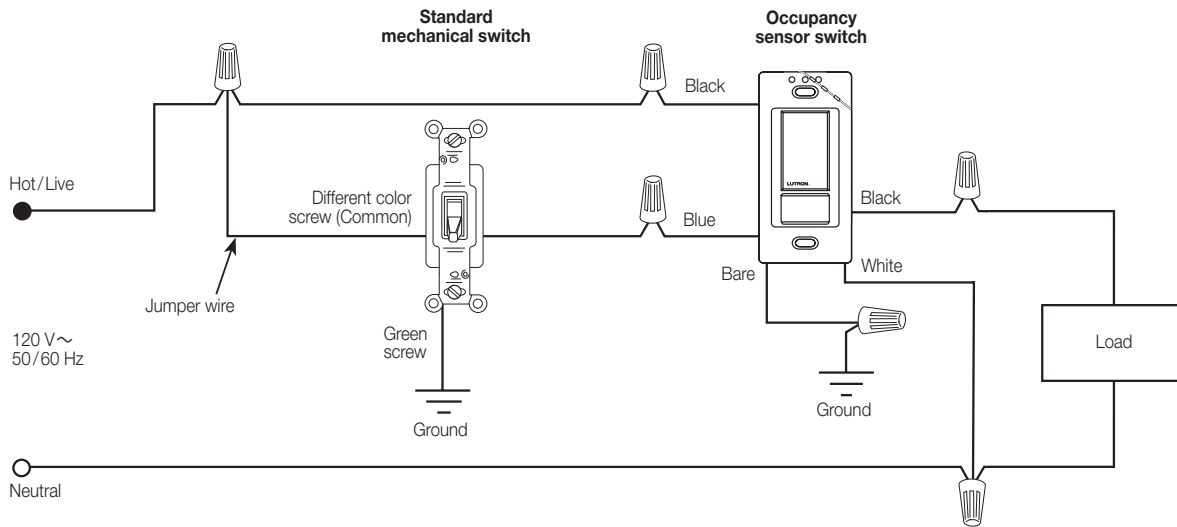

OR

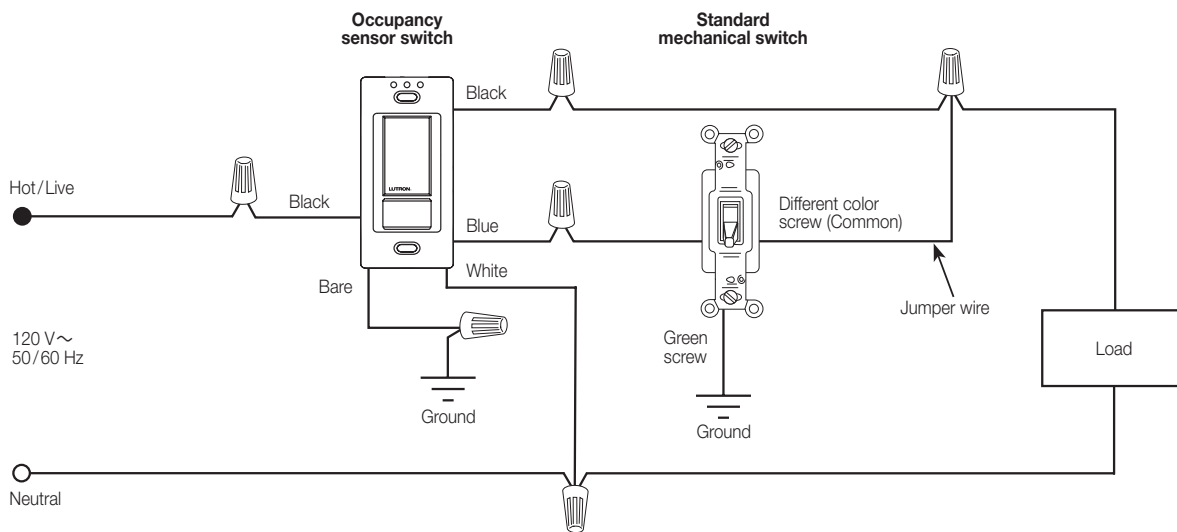

**Note:** When a neutral connection is available, remove the green sleeve and connect the white wire to neutral.

- <sup>1</sup> When using controls in single location installations, tighten the blue terminal or cap blue wire. Do not connect the blue terminal/wire to any other wire or to ground.
- <sup>2</sup> Only one occupancy sensor switch can be used per multi-location circuit.
- <sup>3</sup> A single standard mechanical 3-way switch or up to 9 companion switches may be connected to most occupancy sensor switches. Standard mechanical 3-way switch cannot be combined with companion switch. Total blue terminal wire length may be up to 150 ft (46 m).

Continued on next page...


|             |                |  |
|-------------|----------------|--|
| Job Name:   | Model Numbers: |  |
|             |                |  |
| Job Number: |                |  |

## Wiring Diagrams *(continued)*


### Wiring Diagram 3 - without Neutral

#### 3-way Installation with Standard Mechanical Switch (120 V~)<sup>2, 3</sup>

-OPS5M, -OPS6M2-DV, -VPS5M, -VPS6M2-DV

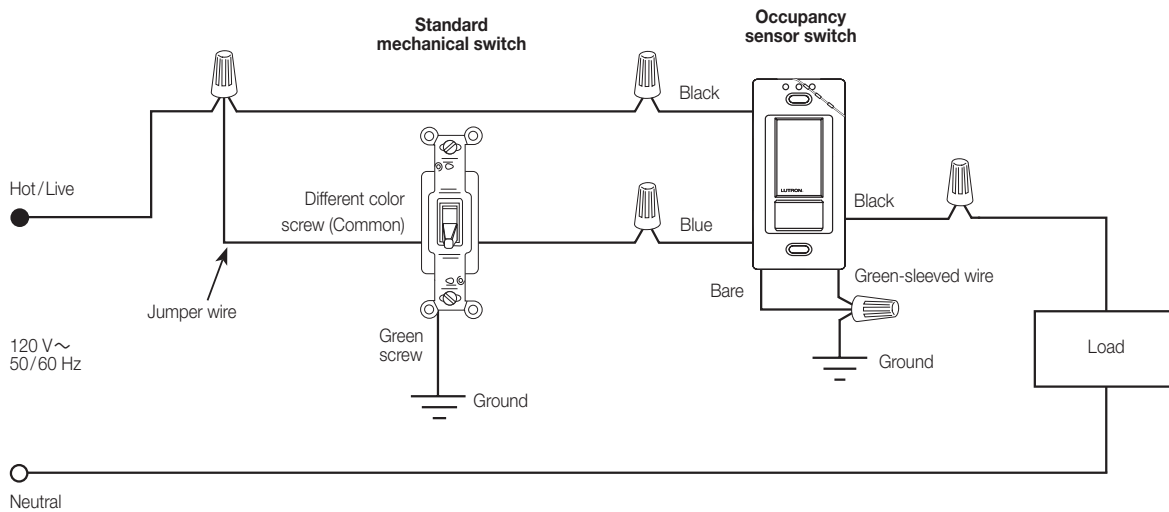

OR

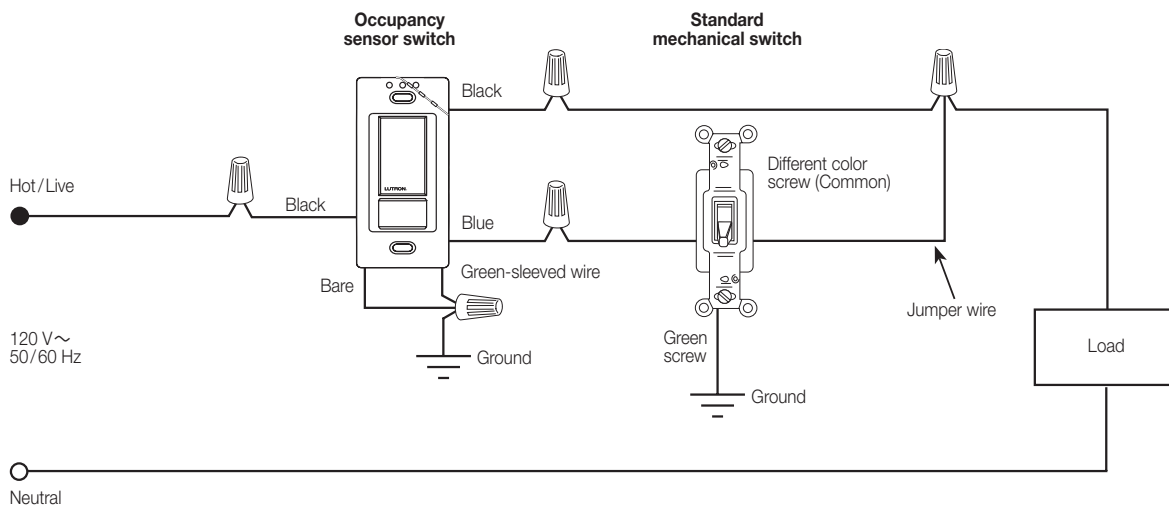

**Note:** Connect green-sleeved wire to ground only in retrofit and replacement applications.

- <sup>1</sup> When using controls in single location installations, tighten the blue terminal or cap blue wire. Do not connect the blue terminal/wire to any other wire or to ground.
- <sup>2</sup> Only one occupancy sensor switch can be used per multi-location circuit.
- <sup>3</sup> A single standard mechanical 3-way switch or up to 9 companion switches may be connected to most occupancy sensor switches. Standard mechanical 3-way switch cannot be combined with companion switch. Total blue terminal wire length may be up to 150 ft (46 m).


*Continued on next page...*

|                      |                      |                      |
|----------------------|----------------------|----------------------|
| Job Name:            | Model Numbers:       |                      |
| <input type="text"/> | <input type="text"/> | <input type="text"/> |
| Job Number:          | <input type="text"/> | <input type="text"/> |

## Wiring Diagrams *(continued)*

### Wiring Diagram 4 - with Neutral

#### 3-way Installation with Standard Mechanical Switch (277 V~)<sup>1, 2, 3</sup> -OPS6M2-DV, -VPS6M2-DV

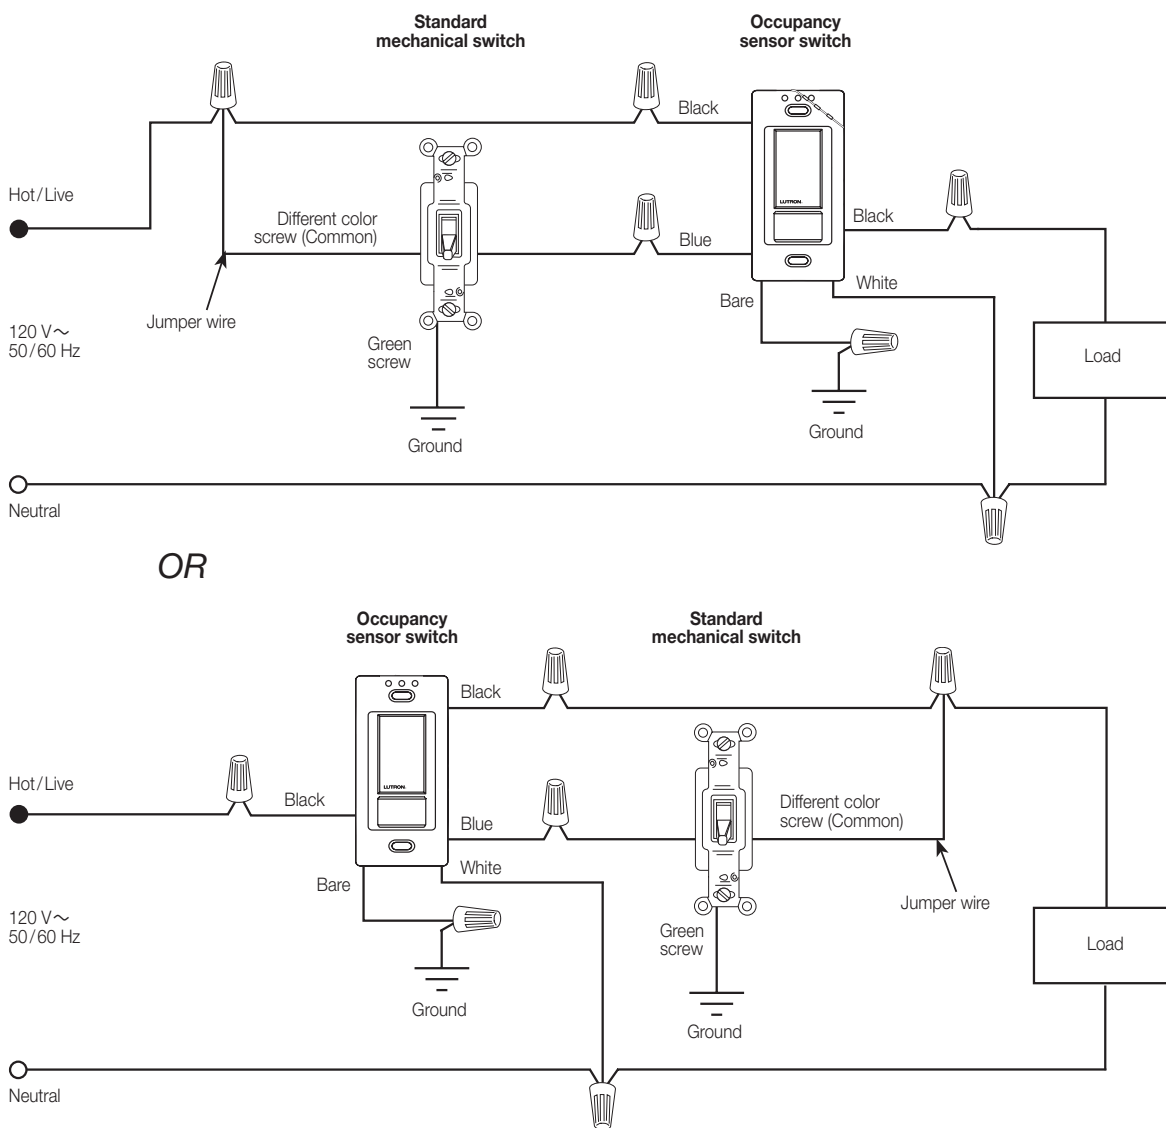

**Note:** When a neutral connection is available, remove the green sleeve and connect the white wire to neutral.

- <sup>1</sup> A single standard mechanical 3-way switch or up to 9 companion switches may be connected to most occupancy sensor switches. Standard mechanical 3-way switch cannot be combined with companion switch. Total blue terminal wire length may be up to 150 ft (46 m).
- <sup>2</sup> Only one occupancy sensor switch can be used per multi-location circuit.
- <sup>3</sup> Fan load applies to 120 V~ only (not for 277 V~).
- <sup>4</sup> Occupancy sensor switch can be installed in any location.

*Continued on next page...*


|             |                |  |
|-------------|----------------|--|
| Job Name:   | Model Numbers: |  |
|             |                |  |
| Job Number: |                |  |

## Wiring Diagrams *(continued)*


### Wiring Diagram 4 - without Neutral

#### 3-way Installation with Standard Mechanical Switch (277 V~)<sup>1, 2, 3</sup>

-OPS6M2-DV, -VPS6M2-DV

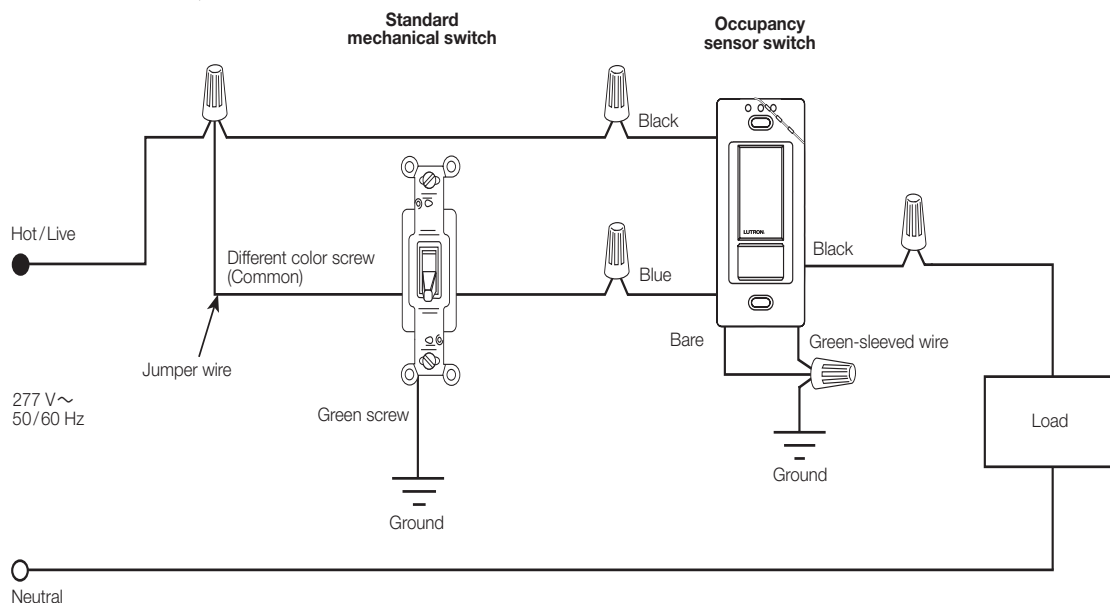

OR

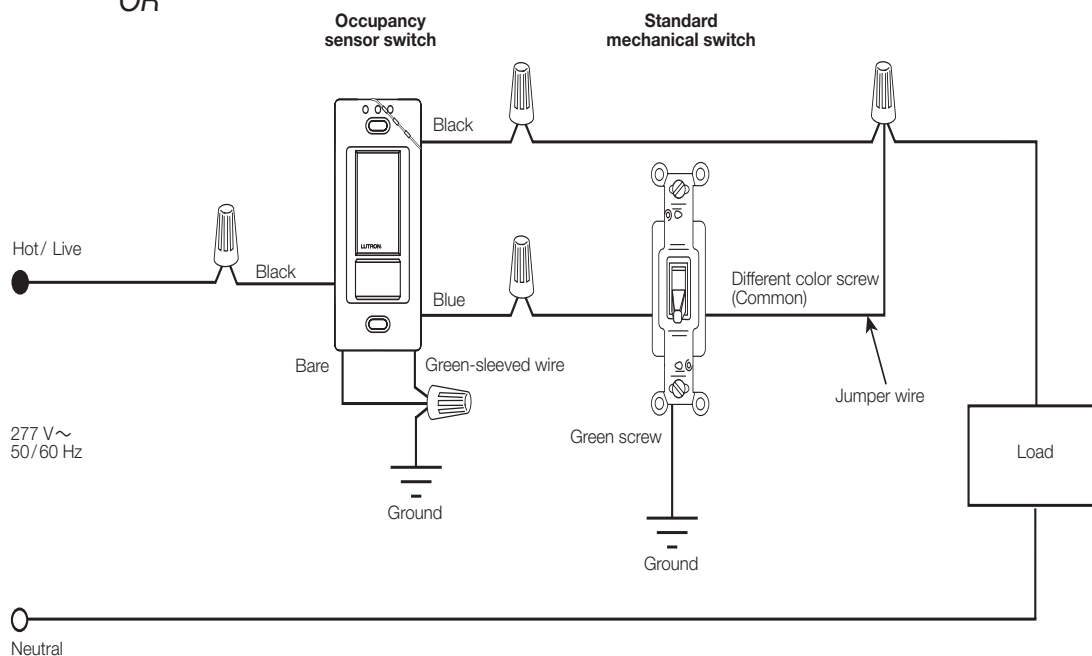

**Note:** Connect green-sleeved wire to ground only in retrofit and replacement applications.

- <sup>1</sup> A single standard mechanical 3-way switch or up to 9 companion switches may be connected to most occupancy sensor switches. Standard mechanical 3-way switch cannot be combined with companion switch. Total blue terminal wire length may be up to 150 ft (46 m).
- <sup>2</sup> Only one occupancy sensor switch can be used per multi-location circuit.
- <sup>3</sup> Fan load applies to 120 V~ only (not for 277 V~).
- <sup>4</sup> Occupancy sensor switch can be installed in any location.

*Continued on next page...*


|                      |                      |                      |
|----------------------|----------------------|----------------------|
| Job Name:            | Model Numbers:       |                      |
| <input type="text"/> | <input type="text"/> | <input type="text"/> |
| Job Number:          | <input type="text"/> | <input type="text"/> |

## Wiring Diagrams *(continued)*

### Wiring Diagram 5 - with Neutral

#### Multi-Location Installation (120 V~)<sup>1, 2, 4</sup>

-OPS5M, -OPS6M2-DV, -VPS5M, -VPS6M2-DV with MA-AS or MSC-AS

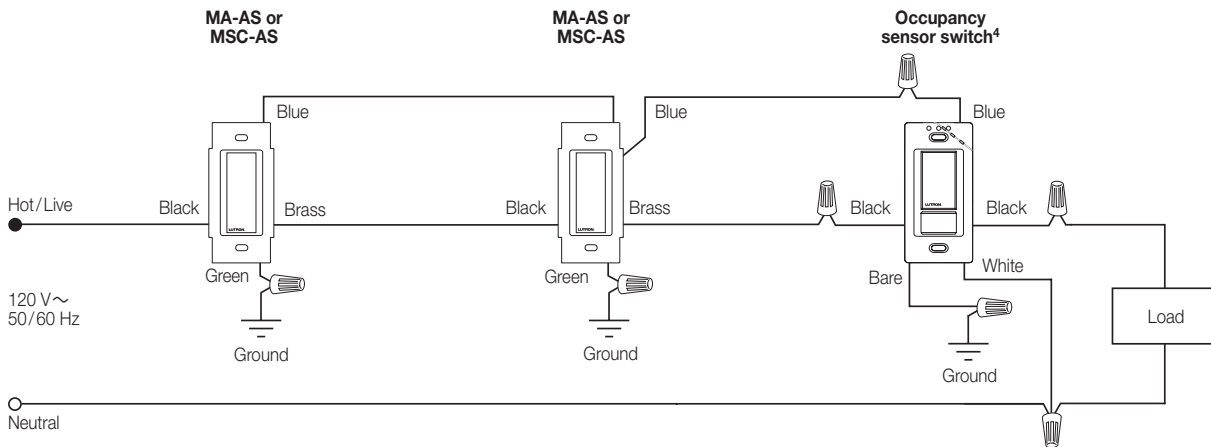


**Note:** When a neutral connection is available, remove the green sleeve and connect the white wire to neutral.

### Wiring Diagram 5 - without Neutral

#### Multi-Location Installation (120 V~)<sup>1, 2, 4</sup>

-OPS5M, -OPS6M2-DV, -VPS5M, -VPS6M2-DV with MA-AS or MSC-AS

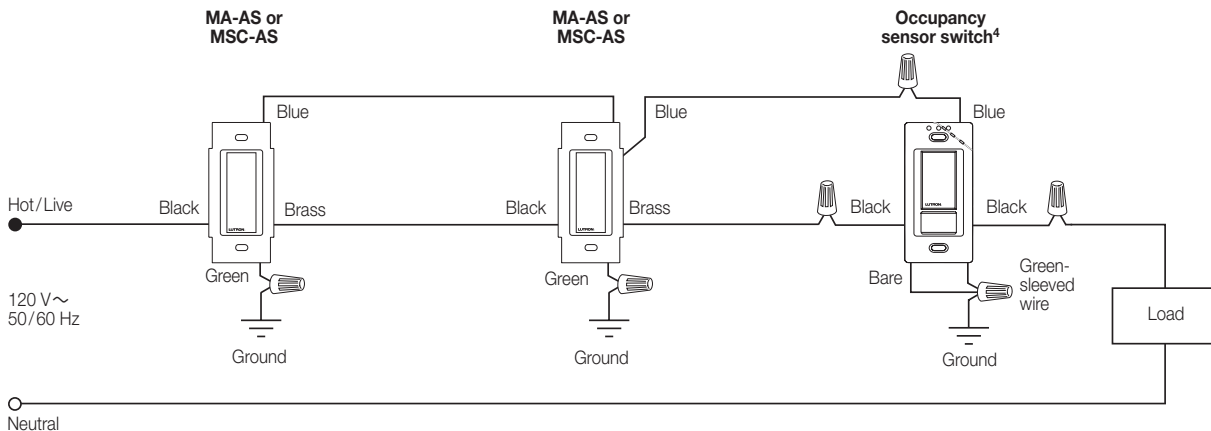

**Note:** Connect green-sleeved wire to ground only in retrofit and replacement applications.

- <sup>1</sup> A single standard mechanical 3-way switch or up to 9 companion switches may be connected to most occupancy sensor switches. Standard mechanical 3-way switch cannot be combined with companion switch. Total blue terminal wire length may be up to 150 ft (46 m).
- <sup>2</sup> Only one occupancy sensor switch can be used per multi-location circuit.
- <sup>3</sup> Fan load applies to 120 V~ only (not for 277 V~).
- <sup>4</sup> Occupancy sensor switch can be installed in any location.

*Continued on next page...*


|             |                |  |
|-------------|----------------|--|
| Job Name:   | Model Numbers: |  |
|             |                |  |
| Job Number: |                |  |

## Wiring Diagrams *(continued)*

### Wiring Diagram 6 - with Neutral

#### Multi-Location Installation (277 V~)<sup>1, 2, 3, 4</sup>

-OPS6M2-DV, -VPS6M2-DV with MA-AS-277 or MSC-AS-277

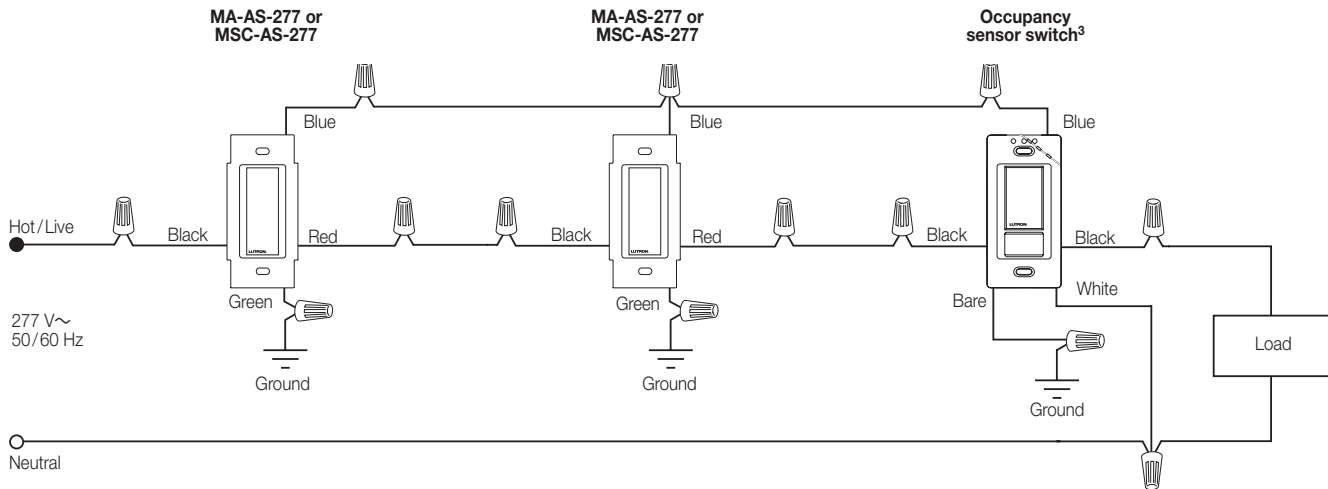


**Note:** When a neutral connection is available, remove the green sleeve and connect the white wire to neutral.

### Wiring Diagram 6 - without Neutral

#### Multi-Location Installation (277 V~)<sup>1, 2, 3, 4</sup>

-OPS6M2-DV, -VPS6M2-DV with MA-AS-277 or MSC-AS-277

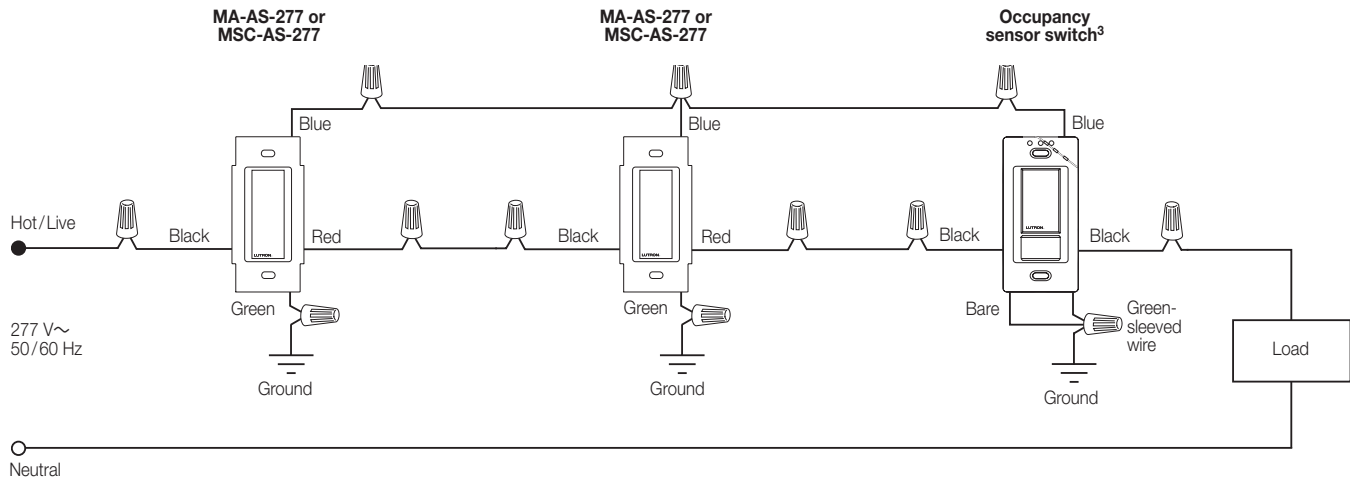

**Note:** Connect green-sleeved wire to ground only in retrofit and replacement applications.

- <sup>1</sup> A single standard mechanical 3-way switch or up to 9 companion switches may be connected to most occupancy sensor switches. Standard mechanical 3-way switch cannot be combined with companion switch. Total blue terminal wire length may be up to 150 ft (46 m).
- <sup>2</sup> Only one occupancy sensor switch can be used per multi-location circuit.
- <sup>3</sup> Fan load applies to 120 V~ only (not for 277 V~).
- <sup>4</sup> Occupancy sensor switch can be installed in any location.

*Continued on next page...*

Job Name:


Model Numbers:



Job Number:

## Colors and Finishes


### Gloss Finishes




White  
WH




Ivory  
IV

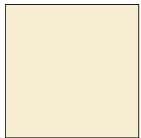

Almond  
AL



Light Almond  
LA

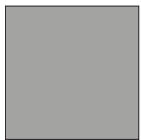

Gray  
GR



Brown  
BR



Black  
BL


### Satin Finishes




Snow  
SW



Midnight  
MN




Taupe  
TP

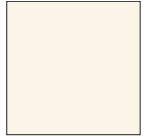

Biscuit  
BI



Eggshell  
ES



Palladium  
PD



Hot  
HT




Merlot  
MR




Plum  
PL




Sienna  
SI

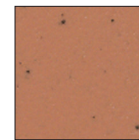


Terracotta  
TC

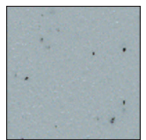


Bluestone  
BG

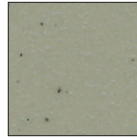


Greenbriar  
GB

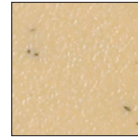


Goldstone  
GS

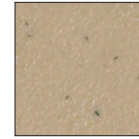

Mocha Stone  
MS

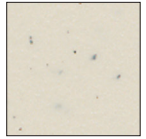

Stone  
ST

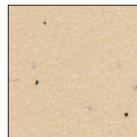

Desert Stone  
DS



Limestone  
LS

For the latest color offerings  
please see our website:  
<http://www.lutron.com/satincolors>

- Due to printing limitations, colors and finishes shown cannot be guaranteed to match actual product colors perfectly.
- Color chip keychains are available for more precise color matching:  
Gloss Finishes: DG-CK-1  
Satin Finishes: SC-CK-1

The Lutron logo, Lutron, Maestro, FASS, XCT, and Softswitch are trademarks or registered trademarks of Lutron Electronics Co., Inc. in the US and/or other countries.  
All other product names, logos, and brands are property of their respective owners.

|                                            |                                               |                      |
|--------------------------------------------|-----------------------------------------------|----------------------|
| <b>Job Name:</b><br><input type="text"/>   | <b>Model Numbers:</b><br><input type="text"/> |                      |
| <b>Job Number:</b><br><input type="text"/> | <input type="text"/>                          | <input type="text"/> |